


The logo for advidia, featuring the word "advidia" in a dark blue, lowercase, serif font. A registered trademark symbol (®) is located at the top right of the letter "a".

advidia®

Extraordinary Combination™

A-47 Network Mini Dome Camera

Quick Operation Guide



Thank you for purchasing the Advidia A-47 mini dome camera. If there are any questions, or requests, please do not hesitate to contact the dealer.

About This Document

This manual applies to the following models.

Model
A-47

This manual may contain several technical incorrect places or printing errors, and the content is subject to change without notice. The updates will be added to the new version of this manual. We will readily improve or update the products or procedures described in the manual.

DISCLAIMER STATEMENT

“Underwriters Laboratories Inc. (“UL”) has not tested the performance or reliability of the security or signaling aspects of this product. UL has only tested for fire, shock or casualty hazards as outlined in UL’s Standard(s) for Safety, UL60950-1. UL Certification does not cover the performance or reliability of the security or signaling aspects of this product. UL MAKES NO REPRESENTATIONS, WARRANTIES OR CERTIFICATIONS WHATSOEVER REGARDING THE PERFORMANCE OR RELIABILITY OF ANY SECURITY OR SIGNALING RELATED FUNCTIONS OF THIS PRODUCT.

Regulatory Information

FCC Information

FCC compliance: This equipment has been tested and found to comply with the limits for a digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC Conditions

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

EU Conformity Statement



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the Low Voltage Directive 2006/95/EC, the EMC Directive 2004/108/EC, the RoHS Directive 2011/65/EU.



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info



Safety Instruction

These instructions are intended to ensure that user can use the product correctly to avoid danger or property loss.

The precaution measure is divided into “Warnings” and “Cautions”

Warnings: Serious injury or death may occur if any of the warnings are neglected.

Cautions: Injury or equipment damage may occur if any of the cautions are neglected.

	
Warnings Follow these safeguards to prevent serious injury or death.	Cautions Follow these precautions to prevent potential injury or material damage.



Warnings

- In the use of the product, you must be in strict compliance with the electrical safety regulations of the nation and region. Please refer to technical specifications for detailed information.
- Input voltage should meet both the SELV (Safety Extra Low Voltage) and the Limited Power Source with 24 VAC or 12 VDC according to the IEC60950-1 standard. Please refer to technical

specifications for detailed information.

- Do not connect several devices to one power adapter as adapter overload may cause over-heating or a fire hazard.
- Please make sure that the plug is firmly connected to the power socket. When the product is mounted on wall or ceiling, the device shall be firmly fixed.
- If smoke, odor or noise rise from the device, turn off the power at once and unplug the power cable, and then please contact the service center.



Cautions

- Make sure the power supply voltage is correct before using the camera.
- Do not drop the camera or subject it to physical shock.
- Do not touch sensor modules with fingers. If cleaning is necessary, use clean cloth with a bit of ethanol and wipe it gently. If the camera will not be used for an extended period, please replace the lens cap to protect the sensor from dirt.
- Do not aim the camera at the sun or extra bright places. Blooming or smearing may occur otherwise (which is not a malfunction), and affect the endurance of sensor at the same time.
- The sensor may be burned out by a laser beam, so when any laser equipment is in using, make sure that the surface of

sensor will not be exposed to the laser beam.

- Do not place the camera in extremely hot, cold (the operating temperature shall be $-30^{\circ}\text{C} \sim +60^{\circ}\text{C}$, or $-40^{\circ}\text{C} \sim 60^{\circ}\text{C}$ if the camera model has an “H” in its suffix), dusty or damp locations, and do not expose it to high electromagnetic radiation.
- To avoid heat accumulation, good ventilation is required for operating environment.
- Keep the camera away from liquid while in use.
- While in delivery, the camera shall be packed in its original packing, or packing of the same texture.
- Regular part replacement: a few parts (e.g. electrolytic capacitor) of the equipment shall be replaced regularly according to their average enduring time. The average time varies because of differences between operating environment and using history, so regular checking is recommended for all the users. Please contact with your dealer for more details.
- Improper use or replacement of the battery may result in hazard of explosion. Replace with the same or equivalent type only. Dispose of used batteries according to the instructions provided by the battery manufacturer.
- If the product does not work properly, please contact your dealer or the nearest service center. Never attempt to disassemble the camera yourself. (We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.)

Table of Contents

1 Appearance Description	8
2 Installation	10
2.1 Ceiling Mounting	11
2.2 Ceiling Mounting with a Gang Box	15
2.3 Pendant Mount Installation	177
2.4 Wall Mount Installation	200
2.5 Install the Micro SD Card	222
3 Setting the Network Camera over the LAN	244
4 Accessing via Web Browser	29

1 Appearance Description

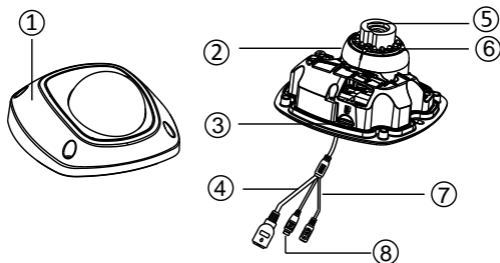


Figure 1-1 Overview (1)

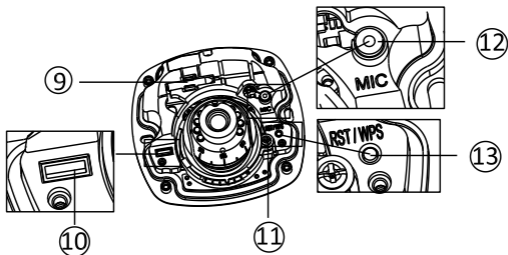


Figure 1-2 Overview (2)

Table 1-1 Physical Description

No.	Description
1	Housing
2	Camera Body
3	Micro SD Card Slot
4	Network Cable
5	Lens
6	IR LED
7	Power Cable
8	Audio/Alarm Cables- Not included on A-47
9	Wi-Fi Antenna- Not included on A-47
10	Serial Port Interface
11	Hex Screw
12	MIC- Not included on A-47
13	RESET



Press RESET about 10s when the camera is powering on or rebooting to restore the default settings, including the user name, password, IP address, port No., etc.

2 Installation

Before you start:

- Make sure the device in the package is in good condition and all the assembly parts are included.
- Make sure all the related equipment is powered off during the installation.
- Check the specification of the products for the installation environment.
- Make sure the power supply matches with your required voltage to avoid damage.
- If the product does not function properly, please contact your dealer or the nearest service center. Do not disassemble the camera for repair or maintenance by yourself.
- Make sure that the wall is strong enough to withstand three times the weight of the camera.



Please pay attention to the following precautions to prevent IR reflection:

- Dust or grease on the dome cover will cause IR reflection. Please do not remove the dome cover film until the installation is finished. If there is dust or grease on the dome cover, clean the dome cover with clean soft cloth and isopropyl alcohol.
- Make sure that there is no reflective surface too close to the camera lens. The IR light from the camera may reflect back into

the lens causing reflection.

- The foam ring around the lens must be seated flush against the inner surface of the bubble to isolate the lens from the IR LEDs. Fasten the dome cover to camera body so that the foam ring and the dome cover are attached seamlessly.

2.1 Ceiling Mounting

Steps:

1. Use the supplied drill template as a guide when drilling holes for the screws and cable.

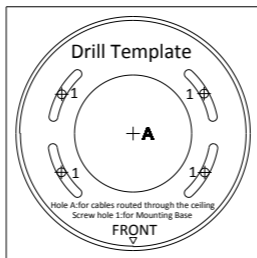


Figure 2-1 Type I Drill Template



2. Use the supplied Allen wrench to loosen the screws on the camera's housing to remove.

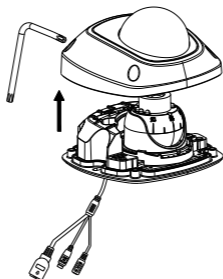


Figure 2-2 Disassemble the Camera

3. Attach the adapter plate to the ceiling with the supplied screws.

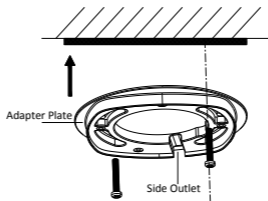


Figure 2-3 Fix the Adapter Plate



4. Attach the camera housing with the supplied screws.

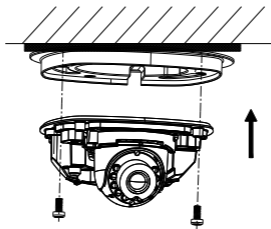


Figure 2-4 Attach the camera body

5. Connect the power cable (if not using PoE), and network cable,



Use pliers to remove the removable tab and route the cables via side outlet (as shown in Figure 2-3) if no cable hole is drilled in step 1, and connect the corresponding cables.

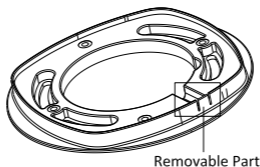


Figure 2-5 Remove the Removable Part

6. View the image via the web browser.
7. Slightly loosen the hex screw beside the RESET button to adjust the surveillance angle.
8. Use the supplied adjusting tool to adjust the pan [$\pm 30^\circ$], tilt [$0 \sim 80^\circ$], and rotation direction [$0 \sim 360^\circ$].

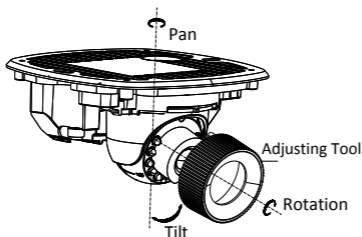


Figure 2-6 3-Axis Adjustment

9. Tighten the hex screw after final adjustments have been made.
10. Place the camera housing over the camera body and tighten the set screws on the front cover.

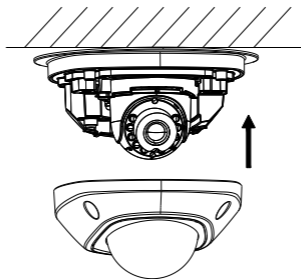


Figure 2-7 Install the Front Cover

11. Remove the protective film carefully to complete the installation.



- Do not remove the protective film until the installation is complete.
- To avoid fingerprints, do not touch the inside dome of the housing with your hands.

2.2 Ceiling Mounting with a Gang Box

Steps:

1. Attach the adapter plate to the gang box with the supplied PM4X8 screws.

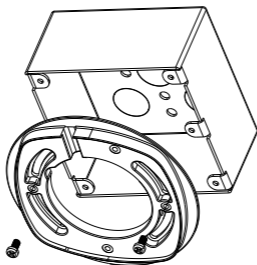


Figure 2-8 Attach the Adapter Plate

2. Attach the camera body to the adapter plate with the supplied PM4X8 screws.

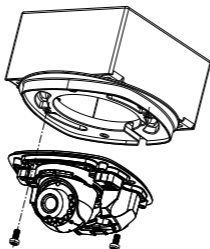


Figure 2-9 Attach camera body

3. Connect the power cable (if not using PoE), and network cable.
4. Place the camera housing over the camera body and tighten the

set screws on the front cover.

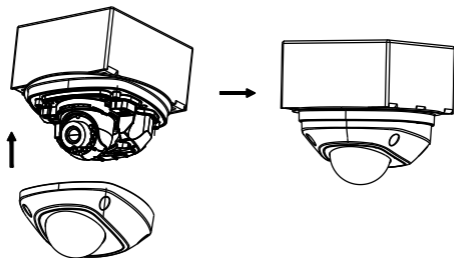


Figure 2-10 Install the Front Cover

5. Tear off the protective film carefully to complete the installation.



- Do not remove the protective film until the installation is complete.
- To avoid fingerprints, do not touch the inside dome of the housing with your hands.

2.3 Pendant Bracket Installation

Steps:

1. Install the bracket to the ceiling with the supplied screws in the ceiling bracket package.



The optional pendant mount for the A-47 is the A-46-PM

2. Attach the adapter plate to the ceiling bracket with the supplied PM4X8 screws.

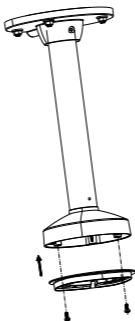


Figure 2-11 Attach the Adapter Plate

3. Attach the camera body to the adapter plate.

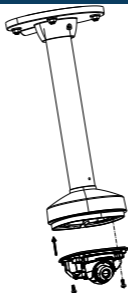


Figure 2-12 Attach camera body

4. Place the camera housing over the camera body and tighten the set screws to complete the installation.

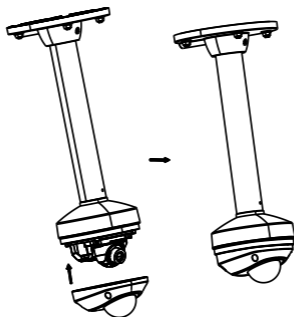


Figure 2-13 Install the Front Cover

5. Remove the protective film carefully to complete the installation.



- Do not remove the protective film until the installation is complete.
- To avoid fingerprints, do not touch the inside dome of the housing with your hands.

2.4 Wall Bracket Installation

Steps:

1. Install the wall bracket to the wall with the supplied screws in the wall bracket package.



The optional wall mount with junction box for the A-47 is part# A-46-WM.

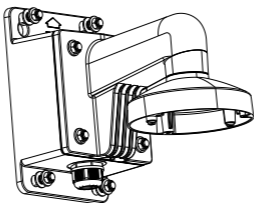


Figure 2-14 Install Wall Bracket

2. Fix the adapter plate to the wall bracket.

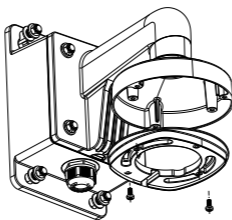


Figure 2-15 Attach the Adapter Plate

3. Attach the camera body to the wall bracket with the supplied screws.

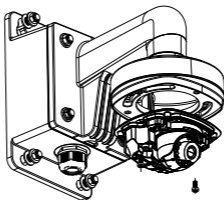


Figure 2-16 Install the Camera

4. Place the housing over the camera body and tighten the set screws to complete the installation.

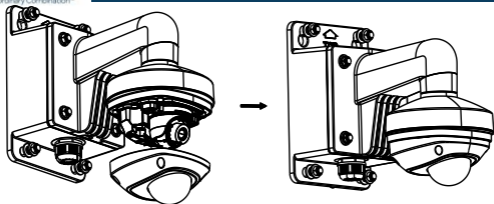


Figure 2-17 Install the camera housing

5. Remove the protective film carefully to complete the installation.



- Do not remove the protective film until the installation is complete.
- To avoid fingerprints, do not touch the inside dome of the housing with your hands.

2.5 Install the Micro SD Card

The A-47 supports local storage; please refer to the following steps to install the micro SD card.

Steps:

1. Remove the housing by loosening the set screws on it.

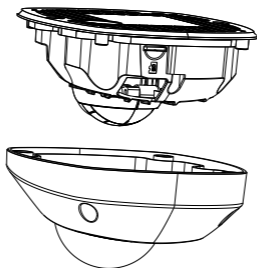


Figure 2-18 Remove the housing

2. Insert the micro SD card to the card slot until you hear a click.
3. To Remove the SD card, push it back in slightly so it will eject.

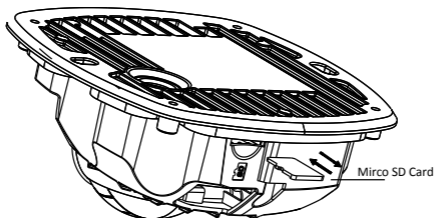


Figure 2-19 Install and Remove Micro SD Card

3 Setting the Network Camera over the LAN

Purpose:

To view and configure the camera via LAN (Local Area Network), you need to connect the network camera in the same subnet with your PC. Then, install the Advidia Camera finder utility to find and change the IP of network camera.

- The following figure shows the cable connection of the network camera and PC:

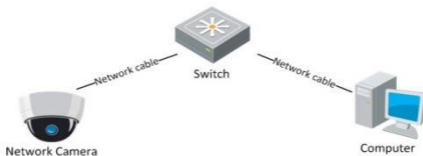


Figure 3-1 Wiring over LAN

- Set the IP address of the camera for accessing via LAN.

Steps:

1. To find the IP address, please do the following:
2. Change the IP address and subnet mask to the same subnet as of your PC.

Refer to the following introductions to set IP address with the Advidia Camera Finder software:

- ☐ **Using Advidia Camera Finder**

Search online devices automatically:

After launching the Advidia A Series Camera finder software, it will automatically search for A series camera every 15 seconds from the subnet where your computer is connected. It will display the total number and information of the found A series devices within the “Online Devices” tab. Device information includes the device type, IP address, port number, and gateway.

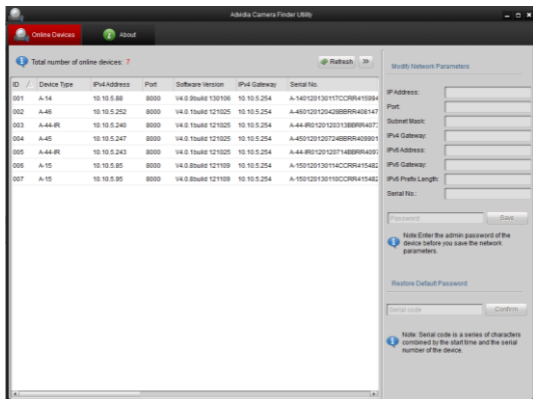



Figure 3-2 Advidia Camera Finder







Devices will be displayed in the list within 15 seconds after it goes online; it will be removed from the list in 45 seconds after it goes offline.

Search online devices manually:

You can also click  **Refresh** to refresh the online device list manually. The newly searched devices will be added to the list.



You can click  or  on each column heading to order the information; you can click  to show the device table and hide the network parameter panel on the right side, or click  to show the network parameter panel.

□ Modify device information

Steps:

- 1). Select the device to be modified in the device list as shown in Figure 3-3. The network parameters of the device will be displayed in the Modify Network Parameters panel on the right side as shown in Figure 3-4.
- 2). Edit the modifiable network parameters, e.g. IP address and port number.
- 3). Enter the password of the admin account of the device in the Password field and click **Save** to save the changes.

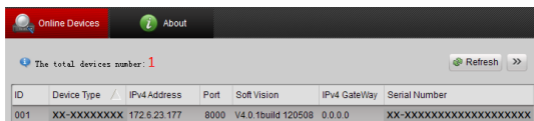


Figure 3-3 Select a Device

The screenshot shows a 'Modify Network Parameters' form with the following fields and values:

- IP Address: 192.0.0.64
- Port: 8000
- Subnet Mask: 255.255.0.0
- IPv4 Gateway: 192.0.0.1
- IPv6 Address: (empty)
- IPv6 Gateway: (empty)
- IPv6 Prefix Length: (empty)
- Serial No.: XXXXXXXXXXXXXXXXXXXX
- Password: (empty)

A 'Save' button is located at the bottom right of the form. A note at the bottom states: 'Note: Enter the admin password of the device before you save the network parameters.'

Figure 3-4 Modify Network Parameters

3. Enter the IP address of network camera in the address field of the web browser to view the live video.



- The default value of the IP address is “192.0.0.64”. The default user name is “admin”, and password is “12345”.
- For accessing the network camera from different subnets, please set the gateway for the network camera after you log in.

4 Accessing via Web Browser

System Requirement:

Operating System: Microsoft Windows XP SP1 and above version / Vista / Win7 / Server 2003 / Server 2008 32bits

CPU: Intel Pentium IV 3.0 GHz or higher

RAM: 1G or higher

Display: 1024×768 resolution or higher

Web Browser: Internet Explorer 6.0 and above version, Apple Safari 5.02 and above version, Mozilla Firefox 3.5 and above version and Google Chrome8 and above version

Steps:

1. Open the web browser.
2. In the browser address bar, input the IP address of the network camera, e.g., 192.0.0.64 and press the **Enter** key to enter the login interface.
3. Input the user name and password.
4. Click **Login**.

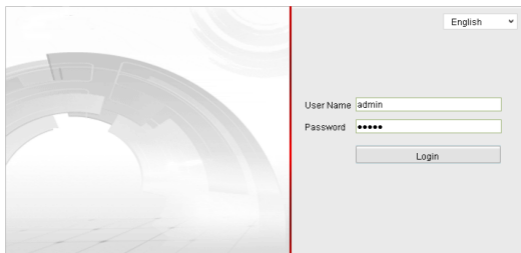


Figure 4-1 Login Interface

5. Install the plug-in before viewing the live video and managing the camera. Please follow the installation prompts to install the plug-in.



You may have to close the web browser to finish the installation of the plug-in.

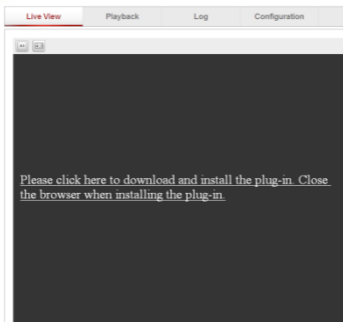


Figure 4-2 Download Plug-in

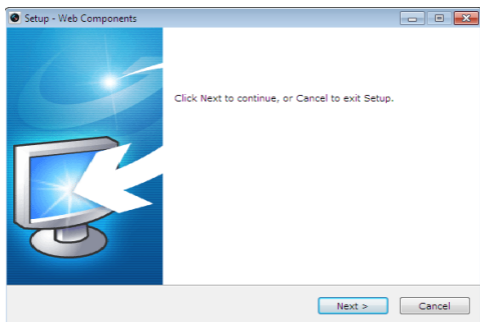


Figure 4-3 Install Plug-in (1)

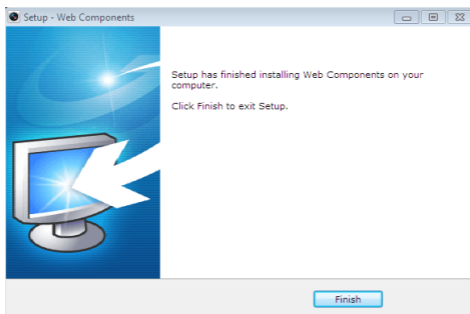


Figure 4-4 Install Plug-in (2)

6. Reopen the web browser after the installation of the plug-in and repeat steps 2-4 to login.



For detailed instructions of further configuration, please refer to the user manual for A-47